
## CY3280-MBR2 CAPSENSE® EXPRESS™ WITH SMARTSENSE™ AUTO-TUNING KIT QUICK START GUIDE



- 1. Open the back cover and insert the batteries in the battery holder.
- 2. Assemble the top and bottom sections of the kit using the screw driver.
- 3. Move the Power Select switch to the "BAT" position.



- Touch any button; the respective LED glows showing one of the LED effects
- For more details about the kit and its features, see the CY3280-MBR2 kit guide.

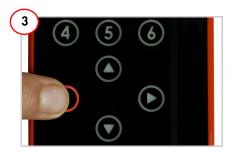

- 1. Touch the Power ( **a** ) button to turn ON/OFF.
- 2. Turn ON the kit and ensure that the Power LED, LED1, and LED2 glows.



 Touch more than one button simultaneously; the touched buttons glow displaying LED effects.

## CY3280-MBR2 CAPSENSE® EXPRESS™ WITH SMARTSENSE™ AUTO-TUNING KIT QUICK START GUIDE

## Kit Details



## Other Kit Contents:

- 1. Two AAA batteries (unassembled)
- 2. Overlay (3-mm thickness)
- 3. A to Mini-B USB cable
- 4. Screw driver
- 5. Five sample CY8CMBR2110 chips
- 6. CY3280-MBR2 kit CD/DVD
- 7. Flex-PCB (with 1-mm overlay)

Insert the kit CD/DVD and install the kit software. View the kit guide for detailed instructions. For the latest information about this kit, visit <a href="http://www.cypress.com/go/CY3280-MBR2">http://www.cypress.com/go/CY3280-MBR2</a>

